



Operating Instructions

Cordless Telephone

Model No. **KX-TGC350**
KX-TGC352

Cordless Telephone with Digital Answering Machine

KX-TGC360
KX-TGC362
KX-TGC364
KX-TG3620

Model No.



Model shown is KX-TGC350.

***Before initial use, see “Getting Started”
on page 8.***

Thank you for purchasing a Panasonic product.

Please read these operating instructions before using the unit and save them for future reference.

Consulte “Guía Rápida Española”, página 36.

For assistance, visit our Web site: <http://shop.panasonic.com/support> for customers in the U.S.A.

Please register your product: <http://shop.panasonic.com/support>

